


The following instructions are intended to assist in installing an MB107 Oil Filter Adapter Kit into any vehicle fitted with an OM617 diesel engine. Please read through the instructions before you begin.

Removal and installation of Oil Filter Housing assembly

1. At this time disconnect the turbo charger oil line and remove the original MB oil filter housing.
2. Thoroughly clean the MB engine block mounting surface of the oil filter housing.
3. Install the Oil Filter Housing adapter with supplied Allen head bolts and flat washers. Note: A silicone type gasket sealer should be applied to both mating surfaces.
4. The pressure side of adapter needs to first supply the turbo charger oil line by using a "T" and the supplied compression adapter line fitting. (See Diagram).
5. Make sure NO threads stick through to the back side of the adapter plate, where the gasket will go.

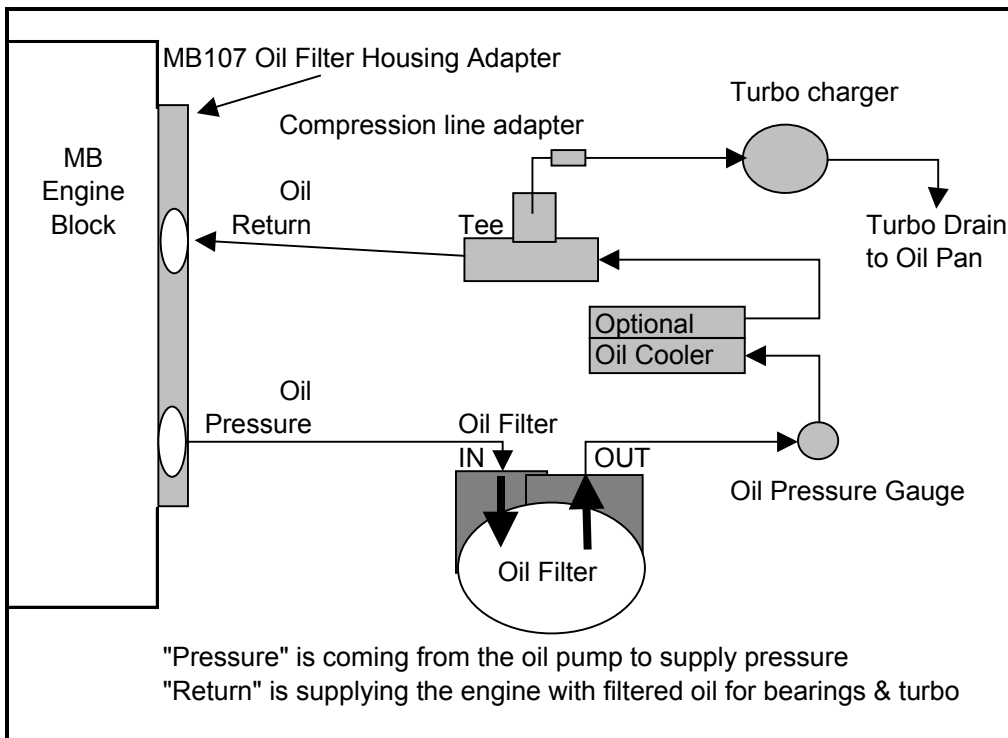

- 6.
7. Double check for Oil leaks.

For more information, technical help, pictures, and accessories visit our website at www.MercedesDiesel4x4.com or email us at sales@MercedesDiesel4x4.com or call 717-448-3800.